

# RBW

Industries, Inc.



UPS SHIPPABLE

### LI'L Rocker

15,000 lb. towing capacity

4-way pivoting head with lockout for easy hook-up

Positive lock slide-bar


Height adjustment: 12 1/2" to 15 1/2"

Universal mounting kit and rails included

LR-10000 Includes bed-rail kit

LR-10005 Without bed-rail kit

UPS SHIPPABLE

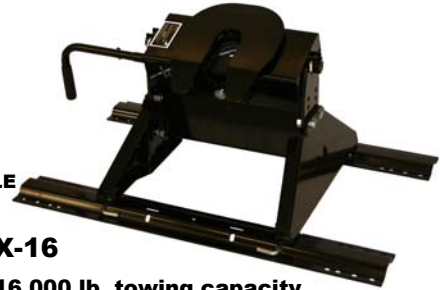

### X-16

16,000 lb. towing capacity

4-way pivoting head for easy hook-up

Positive lock slide-bar

Height adjustment: 14 1/2" to 18 1/2"

Easy removal for full use of truck bed

X-16 Includes bed-rail kit

X-1605 Without bed-rail kit

Visit the RBW web-site and see our other great products and installation manuals.

[www.rbwindustries.com](http://www.rbwindustries.com)

### Hitch "Xtender" Series 16K



Designed for short-bed trucks

Better low speed turn radius

10" slide distance

Fits LI'L Rocker and X-16 head

PS-1001 16K Xtender only

PS-1001-16 Xtender with 16K head with rails



UPS SHIPPABLE

### X-22

22,000 lb. towing capacity

17,000 lb. vertical load rating

4-way pivoting head for easy hook-up

Positive lock slide-bar

Fully assembled base

Engineered to SAE standards

X-22 Includes bed-rail kit

## RBW BRACKET CHART

VEHICLE			HITCH MODEL						
YEAR	MAKE	MODEL	BED LENGTH	LR-10000	X-16	PS-1001	PS-1001-16	X-22	
THRU-1998	CHEVY/GMC	1500	6 1/2'			KIT NEEDED (P-180)	INCLUDED* P-180		
THRU-1998	CHEVY/GMC	1500	8'	INCLUDED* P-180	INCLUDED* P-180			INCLUDED	
99-06	CHEVY/GMC	1500	6 1/2'			INCLUDED* P-183	INCLUDED* P-183		
99-06	CHEVY/GMC	1500	8'	INCLUDED* P-183	INCLUDED* P-183			INCLUDED	
THRU-1999	CHEVY/GMC	2500-3500	6 1/2'			KIT NEEDED (P-180)	INCLUDED* P-180		
THRU-1999	CHEVY/GMC	2500-3500	8'	INCLUDED* P-180	INCLUDED* P-180			INCLUDED	
00-06	CHEVY/GMC	2500-3500	6 1/2'			INCLUDED* P-183	INCLUDED* P-183		
00-06	CHEVY/GMC	2500-3500	8'	INCLUDED* P-183	INCLUDED* P-183			INCLUDED	
THRU 2001	DODGE	1500-2500-3500	6 1/2'			KIT NEEDED (P-180)	INCLUDED* P-180		
THRU 2001	DODGE	1500-2500-3500	8'	INCLUDED* P-180	INCLUDED* P-180			INCLUDED	
02-06	DODGE	1500	6 1/2'			KIT NEEDED (P-210)	KIT NEEDED (P-210)		
02-06	DODGE	1500	8'	KIT NEEDED (P-210)	KIT NEEDED (P-210)			INCLUDED	
03-06	DODGE	2500-3500	6 1/2'			KIT NEEDED (P-210)	KIT NEEDED (P-210)		
03-06	DODGE	2500-3500	8'	KIT NEEDED (P-210)	KIT NEEDED (P-210)			INCLUDED	
THRU-2003	FORD	F-150 - F-250 - F350	6 1/2'			KIT NEEDED (P-180)	INCLUDED* P-180		
THRU-2003	FORD	F-150 - F-250 - F350	8'	INCLUDED* P-180	INCLUDED* P-180			INCLUDED	
2004-2006	FORD	F-150	6 1/2'			KIT NEEDED (P-211)	KIT NEEDED (P-211)		
2004-2006	FORD	F-150	8'	KIT NEEDED (P-211)	KIT NEEDED (P-211)			INCLUDED	
2004-2006	FORD	F-250 - F350	6 1/2'			KIT NEEDED (P-180)	INCLUDED* P-180		
2004-2006	FORD	F-250 - F350	8'	INCLUDED* P-180	INCLUDED* P-180			INCLUDED	
THRU-2006	FORD	F-450 - F-550	8'	INCLUDED* P-180	INCLUDED* P-180			INCLUDED	

\*Brackets are included with the hitch purchase.

When stated "KIT NEEDED" it is necessary to purchase an additional bracket kit for this install.